


# ピンボール・アクション取扱説明書 Service Manual





#### ●テーブルへのコントロールパネルの取り付け方

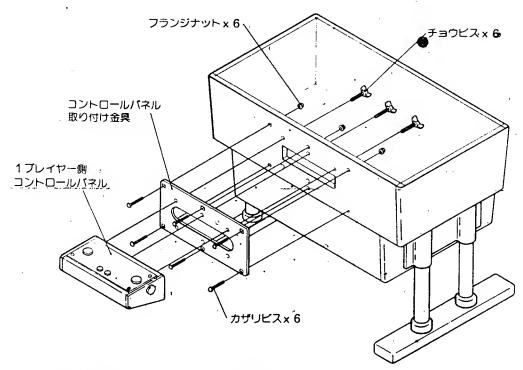

※2プレンヤー側も1プレイヤー側と同様に取り付けて下さい。

\*Mountaile control panel in the 2-player side in a manner similar to the 1-player side

#### 注意事項

制御回路はすべてICで構成されているので長寿命の反面、取扱い方によっては横時に破壊するので次の点に充分気をつけて下さい。

- 1. 部品交換、コネクタの抜き差しは、必ず電源を切って下さい。
- 2. PCボードのテスター検査はしないで下さい。テスター内部電圧でICを破壊する事があります。
- 3. PCボードは絶対に直射日光には当てないで下さい。
- 4. コネクターを接続する時は、コネクターの向きを間違えないよう充分注意して下さい。
- 5. PCボードの持ち運びはビニールエアマット等を使用し強い衝撃を加えないようご注意下さい。

All control circuits are composed of ICs, and though they have a long service life, they may be instantly broken in the event of mishandling. So, fully observe the following precautions.

- Be sure to turn power OFF when changing parts or pulling/inserting each connector.
- 2. Don't use the tester to inspect the PC board, since an IC may be broken due to the tester's internal voltage.
- 3. Be sure never to expose the PC board to the direct rays of the sun-
- 4. When connecting the connector, be careful so that it is correctly directed.
- 5. When moving the PC board, use a PVC air mat, etc. so that it is not given a strong shock

### TEHRAD 株式会社 テーカン

お問合わせ 商品センター内技術サービス係まて

本社/〒101 東京都千代田区神田東松下町41番地 TEL. 03(256)0371 - 7


営業本部/〒130 東京都墨田区吾妻橋 2 - 1 - 13 TEL. 03(624)3101

商品センター/〒273 千葉県船橋市二子町582-3 TEL 0473(36)6110

Printed in Japan

TEHKAN LTD. 41 Kanda Higashi Matsushita-cho, Chiyoda-ku, Tokyo 101, Japan TEL (03)256-0378 TELEX: J27174 TEHKAN

### ピンボール・アクション

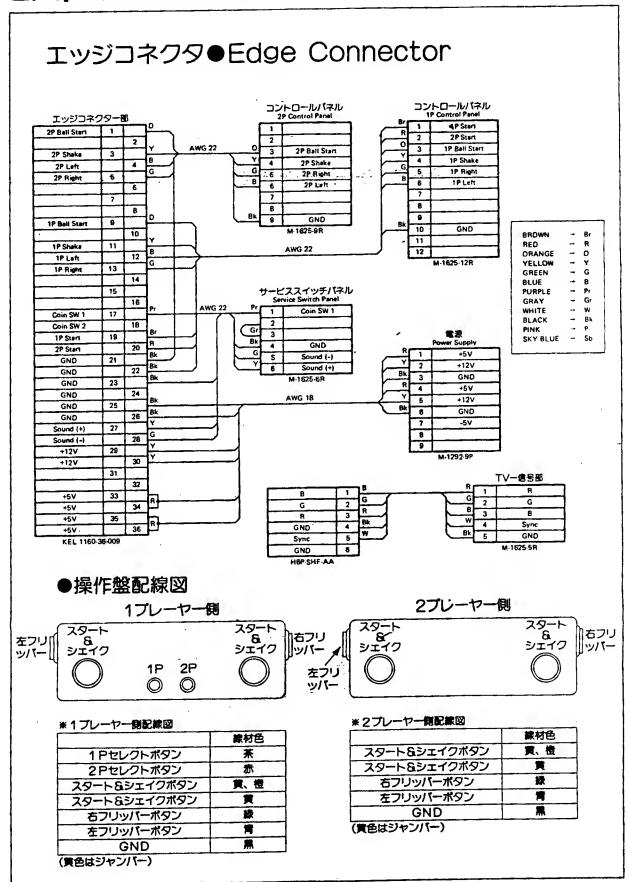

## ディップスイッチ●Dip Switch

	DIP SWITC	. н л		1	2	3	4	5	6	7 .	8
						<u> </u>	<del></del>	<del>                                     </del>	<del>                                     </del>		
COIN 1.	1 CC	1 COIN - 1 PLAY		OFF	OFF		ļ	ļ	<u> </u>		
	1-COIN - 2 PLAY			.ON.	OFF.		ļ				
	1 COIN - 3 PLAY			OFF	ÓN		<u> </u>		ļ		
	1 COIN - 6 PLAY		ON	ON	Ĺ						
COIN 2	1 CC	DIN —	1 PLAY			OFF	OFF				
	2 COIN — 1 PLAY				ON	OFF		<u> </u>			
	1 COIN - 2 PLAY				OFF	ON		<u> </u>			
	1 COIN - 3 PLAY				ON	ON					
ポールの数 NO. OF BALLS	3							OFF	OFF		
	4							ON	OFF		
	5							OFF	ON		
	2						ON	ON			
タイプ TYPE	テーブル	COC	KTAIL TABLE							OFF	
	アップライト UPRIGHT									QN	
デモンストレーション音 DEMONSTRATION SOUND		音有	SOUND								OFF
		音無	NON SOUND							*.	ON

DIP SWITCH B				1 .	2	3	4	5	6	7	8
エキステンド EXTEND	70000, 200000			OFF	OFF	OFF					
	70000, 200000, 1000000			ON	OFF	OFF					
	100000			OFF	ON	OFF					
	100000, 300000			ON	ON	OFF					
	100000, 300000, 1000000			OFF	OFF	ON					
	200000			ON	OFF	ON					
	200000, 1000000			OFF	ON	ON					
	NO			ON	ON	ON					
*エキストラ EXTRA	易 EASY					OFF					
	₩ DIFFICULT		-	_		ON					
難易度1(フリッパー間の距離) DIFFICULTY 1 (DISTANCE BE- TWEEN FLIPPERS)	業易度	1	<b>易 EASY</b>					OFF	OFF		
	:	2 .						ON	OFF		
		3	1					OFF	ON		
		4	難 DIFFICULT					ON	ON		
難易度2(アウトレーンの難易度) DIFFICULTY 2 (DIFFICULTY IN OUTLANE)		2 /	ーマル NORMAL							OFF	OFF
		1	易 EASY							ON	OFF
		3	1							OFF	ON
		4	難 DIFFICULT							ON	ON

#### ※メイン画面のエキストラランプの灯く確率

<sup>\*</sup>The probability of the extra lamp lighting up on the main screen.

